

THE SAFETY BOX

Operating Instructions

TO OPEN THE SAFETY BOX

Default factory code is **159**.

Enter: 159, then press A.

If the yellow light flashes, turn the knob or handle to open the door.

If the yellow light doesn't flash, the code was not accepted.

△ Notes:

3 incorrect entries will cause a 20-second lockout.

Multiple failures may trigger a 5-minute security lock.

TO CLOSE THE SAFETY BOX

Close the door.

Turn the handle or knob back to the locked (vertical) position.

TO SET OR CHANGE YOUR USER CODE

With the door open, press the red button inside the door.

The yellow light will turn on.

Enter your new 3–8 digit code, then press A.

If the yellow light flashes and you hear a beep, the code is saved.

If there's no beep, the code was not saved — please try again.

⌚ You have 30 seconds to input the new code after pressing the red button.

IF YOU FORGET YOUR CODE (USE OVERRIDE KEY)

Remove the round cover near the knob.

Insert the override key and turn it.

Then turn the knob or handle to open the safety box.

After use, remove the key and store it safely.

△ Please contact our staff you need to use the override key.

TO REPLACE BATTERIES

Batteries are behind the keypad.

Open the cover and replace with 4 AA batteries.

A green light will flash when they are installed correctly.

Always test your code before closing the door.

